



41061

 




2



1

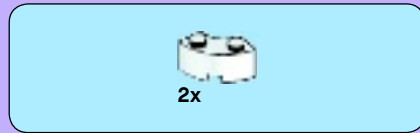

2





2x

3



2x

4





2x

5



1x



1x

6





1x

1



 
1x

2






3

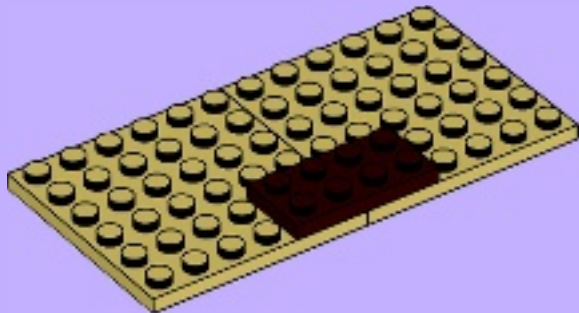



1x

 
4

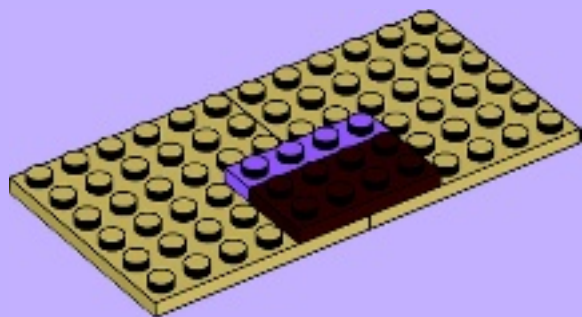

1x

 5



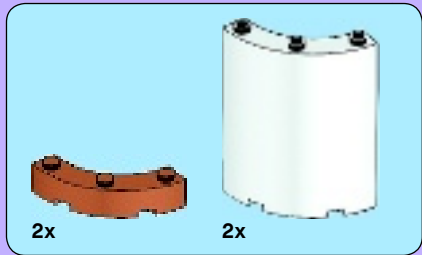

6

 
1



2



3

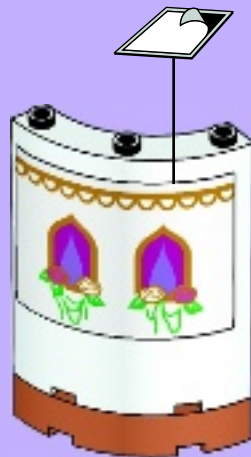





7





2x

8





2x

9



2x

10



 


1x


11




12

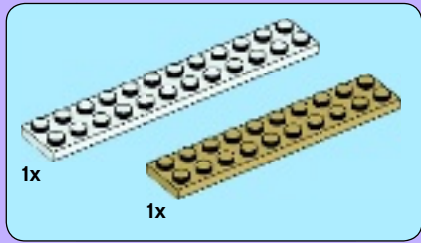

12

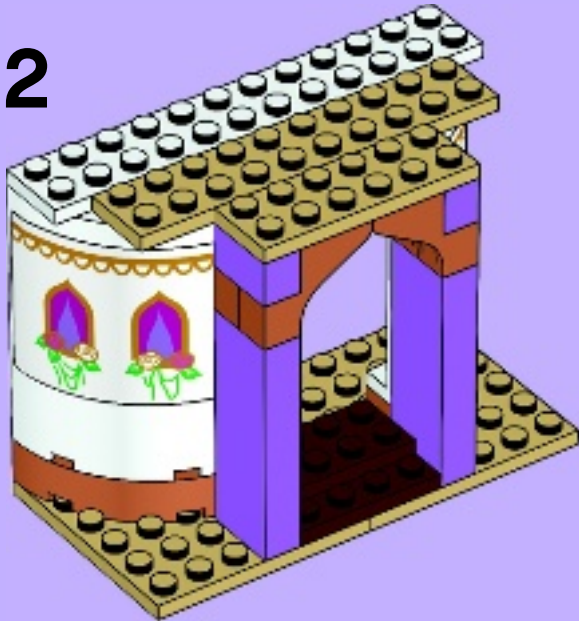 

13

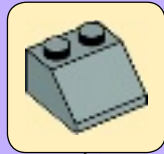 





2x



2x

# 14

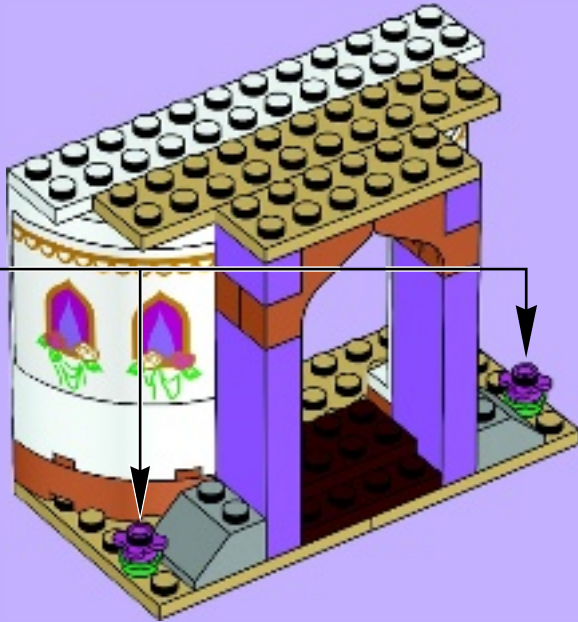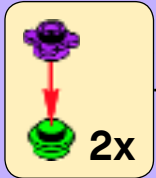  



2x



2x

# 15





2x

16







2x



2x

# 17



 


2x



1x


# 18

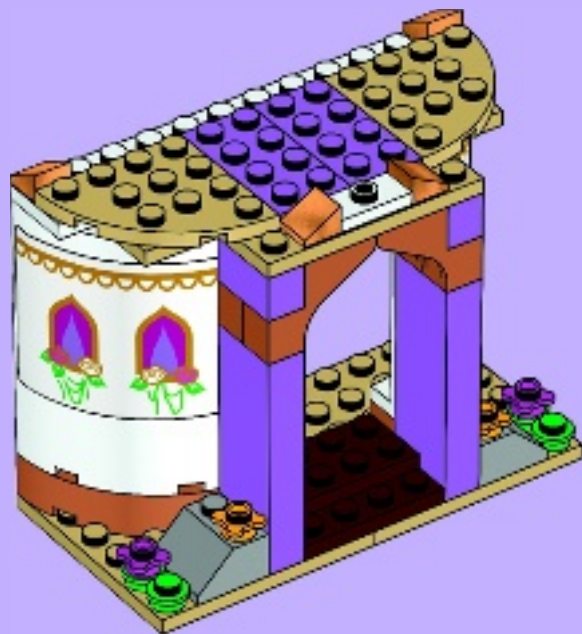




2x

  
19



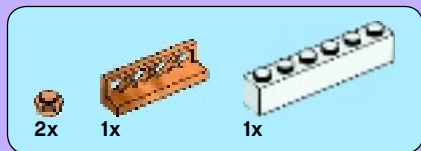


20

 
1

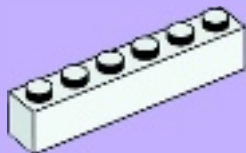


2

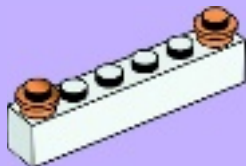 

3

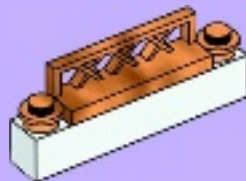 

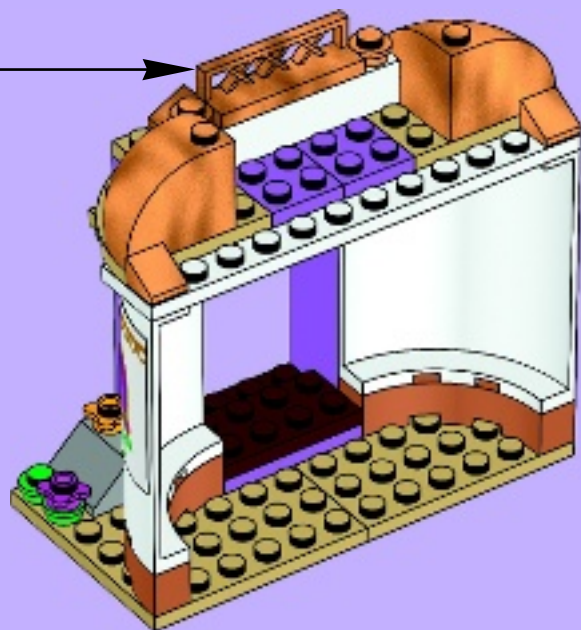 




1x



1x




# 21

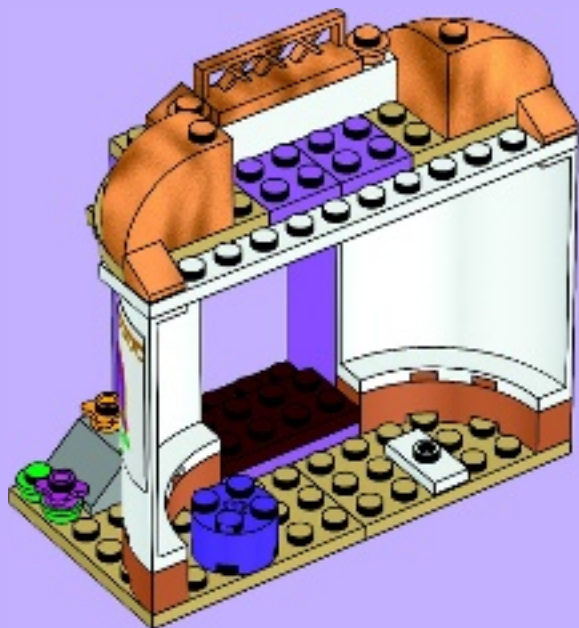 

22



# 22

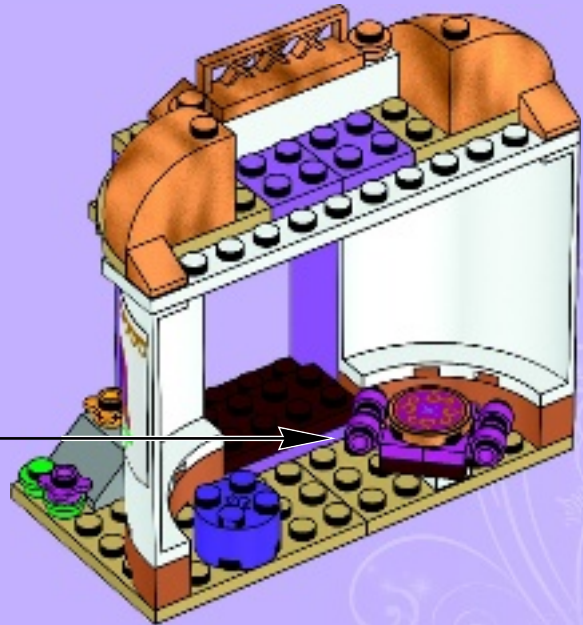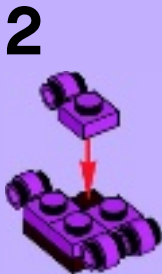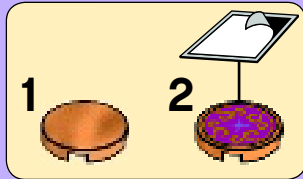   




1x



1x

# 23

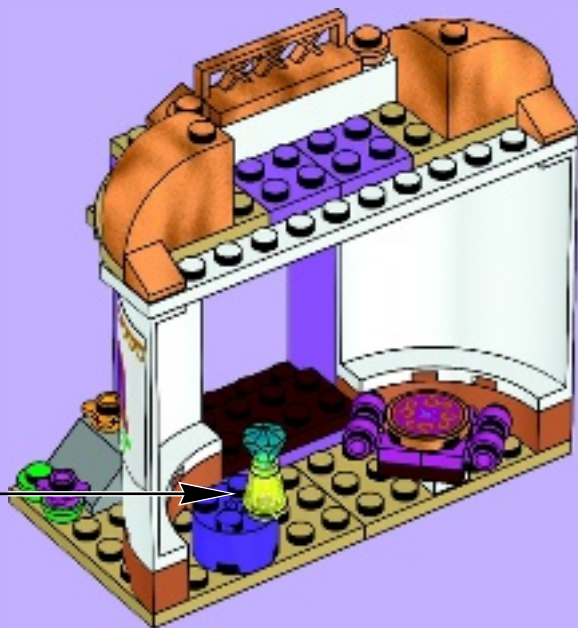 

24






1x



2x

# 24

 



1x



2x

# 25



26

 


2x



2x

26

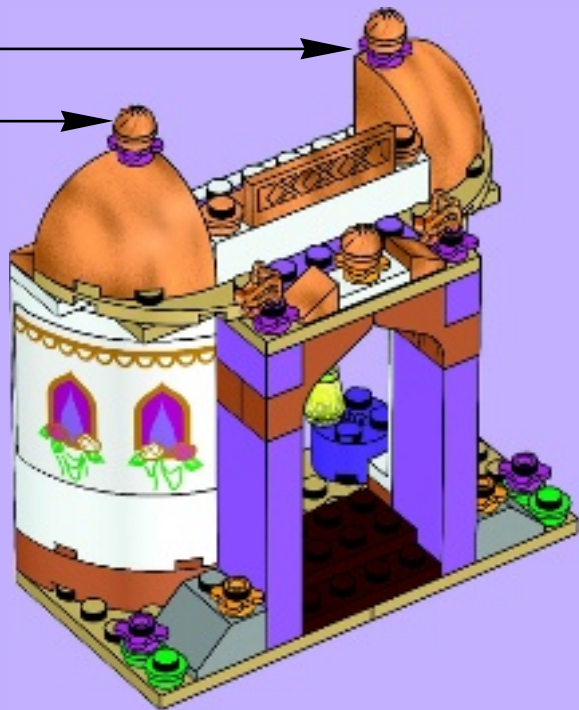





Customer Service

Kundenservice

Service Consommateurs

Servicio Al Consumidor

LEGO.com/service or dial



: 00800 5346 5555

: 1-800-422-5346



41062



Disney  
FROZEN

41055



41054





41060

41061

41063



# LEGO.com/disneyprincess



Disney  
**FROZEN**

