



Disney

43206



2



WARNING: CHOKING HAZARD. Toy contains small parts and a small ball. Not for children under 3 years.



AVERTISSEMENT :

 
RISQUE D'ÉTOUFFEMENT. Le jouet contient des petites pièces ainsi qu'une petite boule. Il ne convient pas aux enfants de moins de 3 ans.

 


ADVERTENCIA:


PELIGRO DE ASFIXIA.

Juguete que contiene partes pequeñas y una pelota pequeña. No recomendado para niños menores de 3 años.

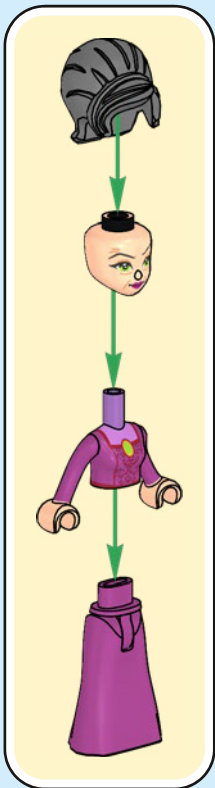






1

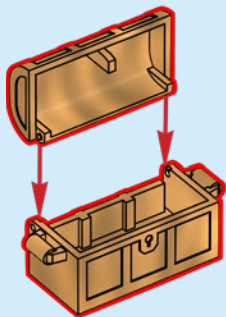 


2

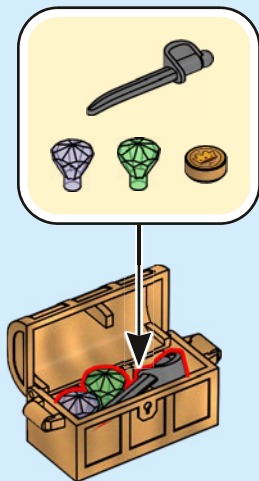 

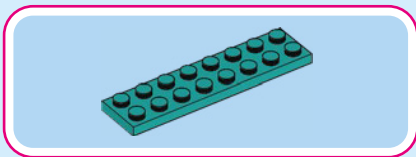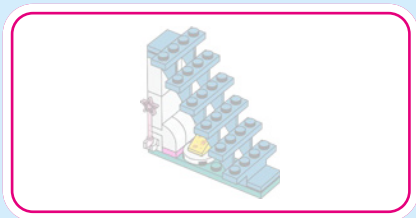  



1

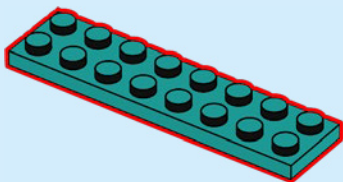 




2

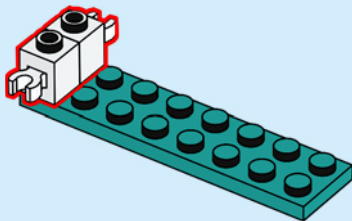 

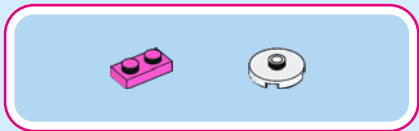 



3

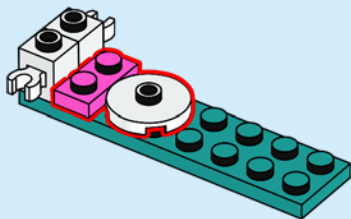 





4

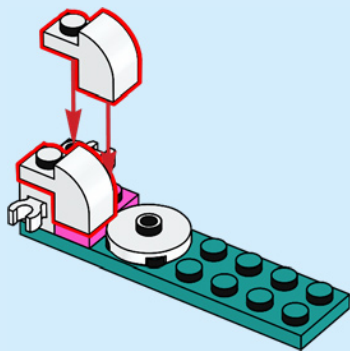 

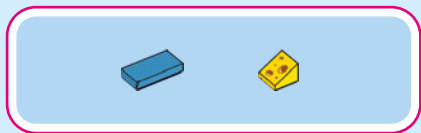 



5

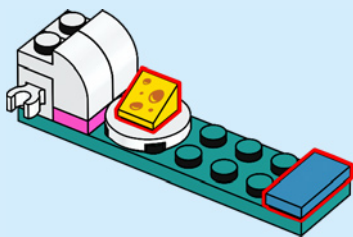 

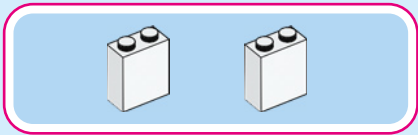 



6

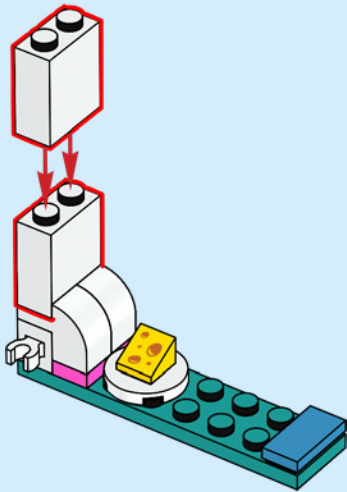 

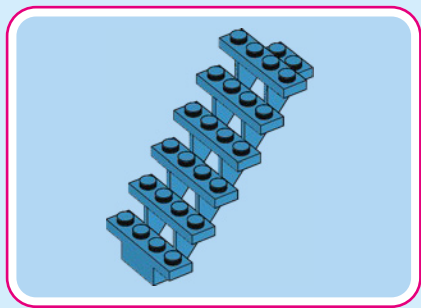 



7

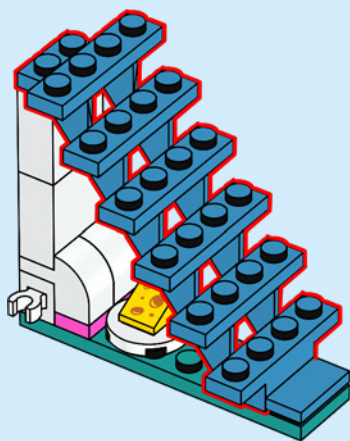 

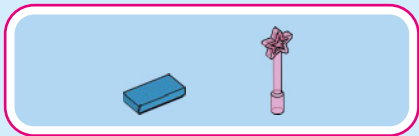 


8

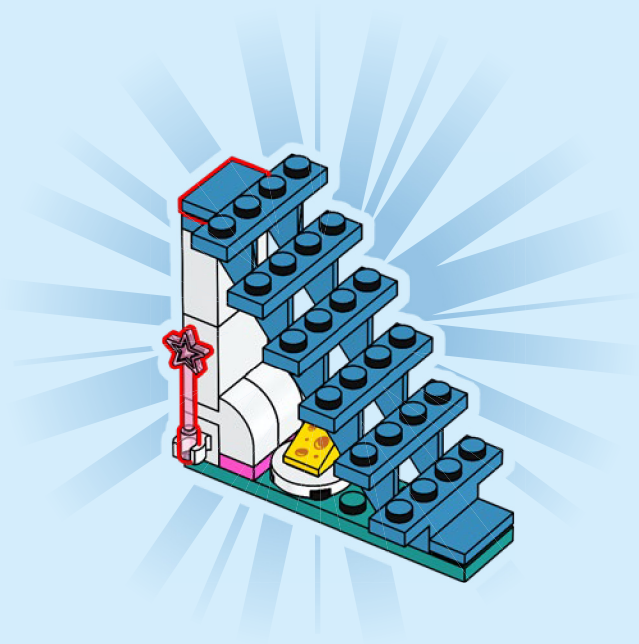 

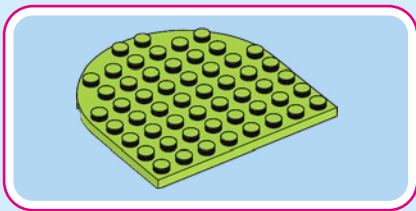 



1

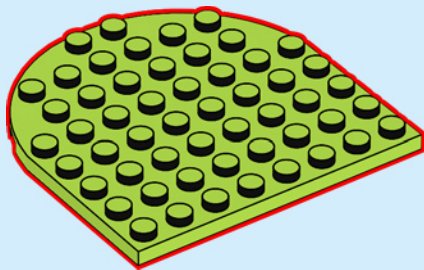 





2

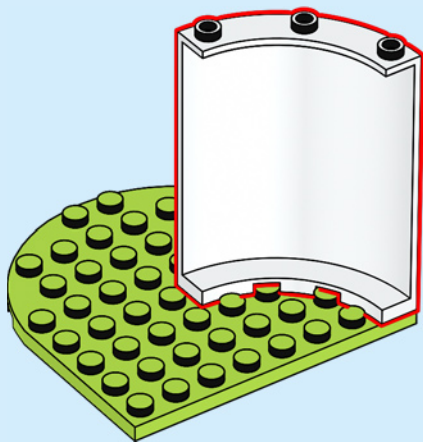 

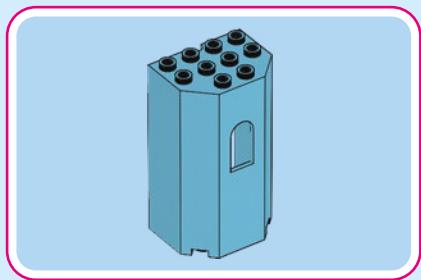 



3

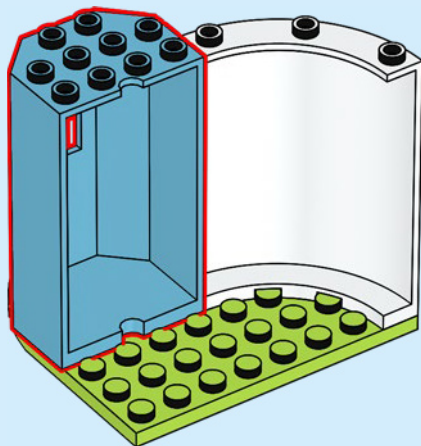 

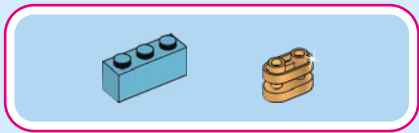 


4

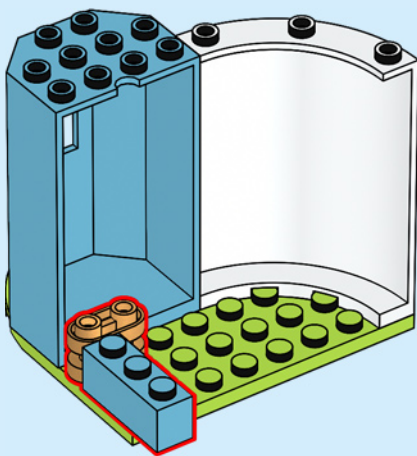 

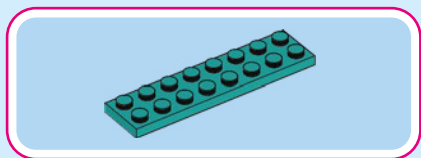 



5

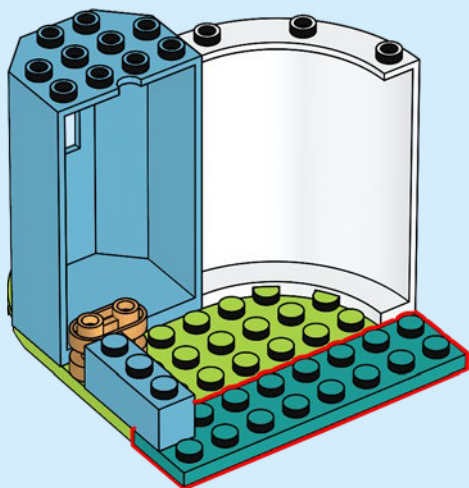 





6

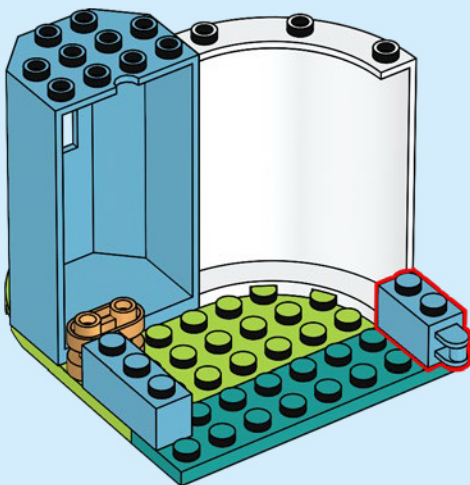 

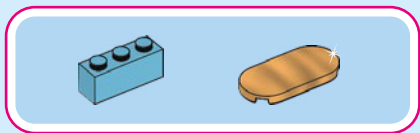 



7

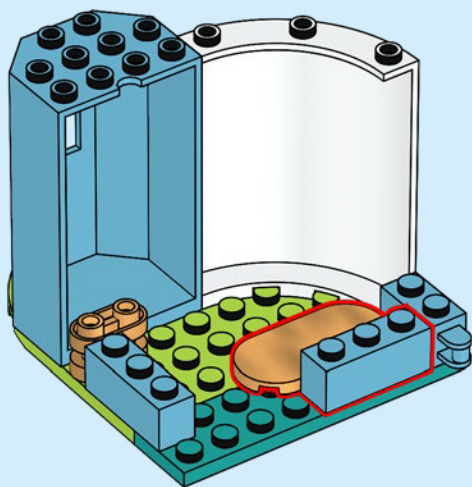 

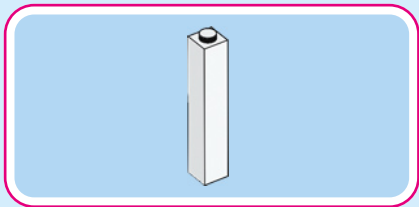 



8

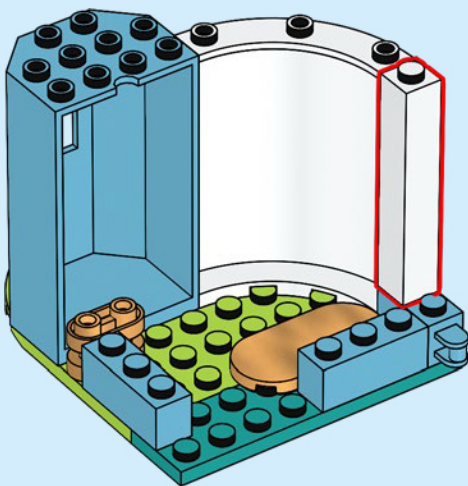 

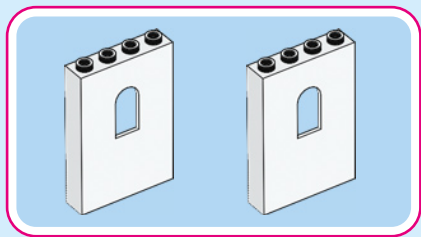 


9

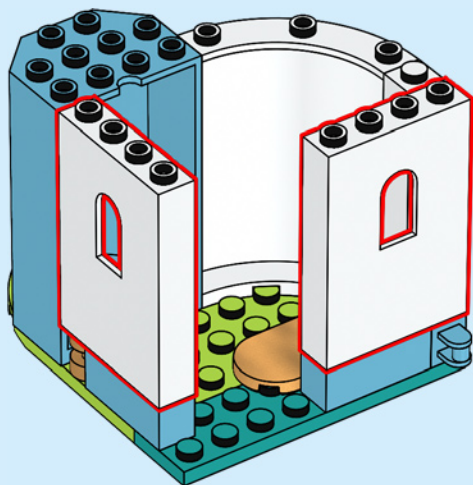 

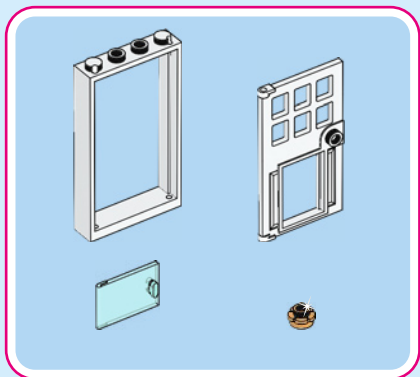 


10

 
1

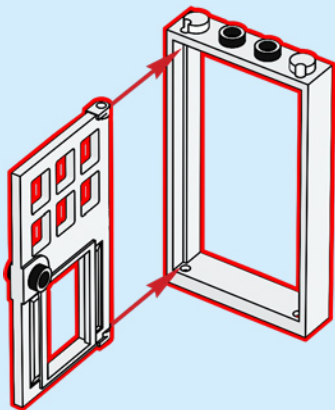



2

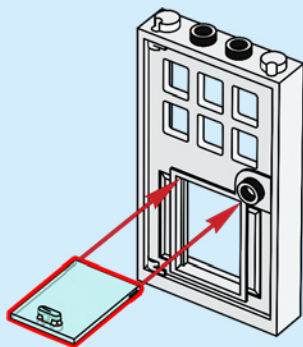 


3

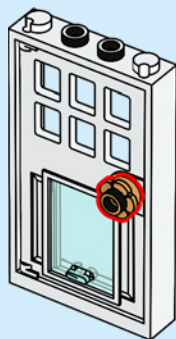 


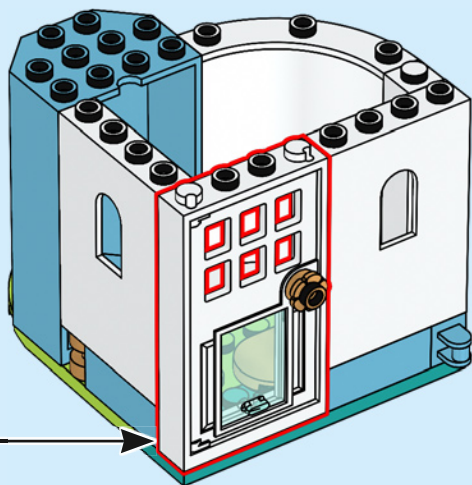 

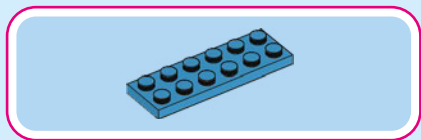 



11

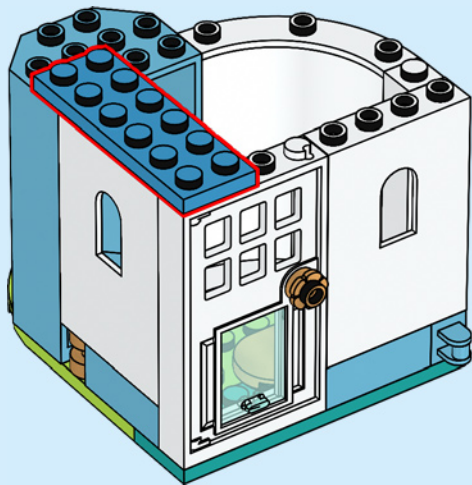 

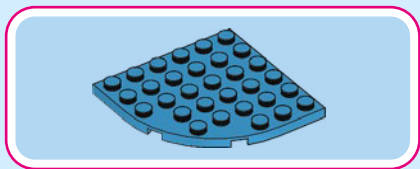 


12

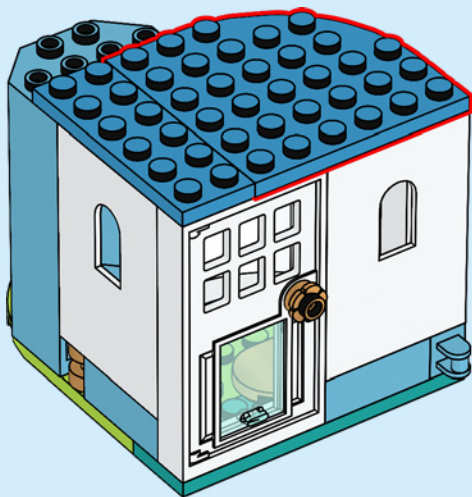 

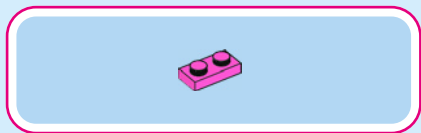 



13

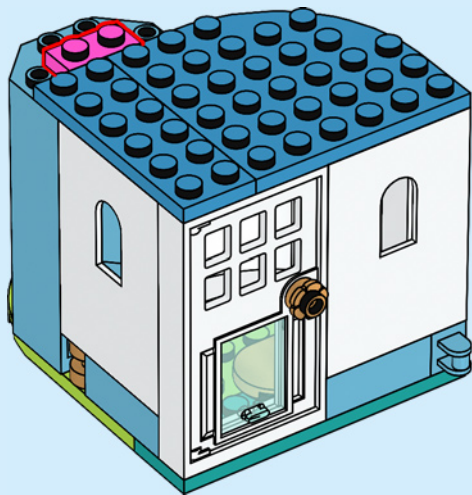 





14

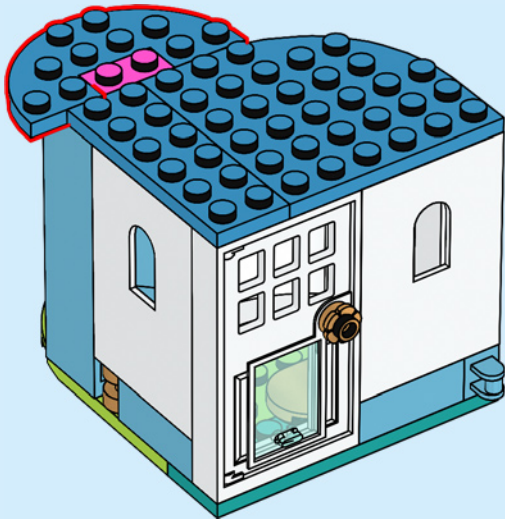 


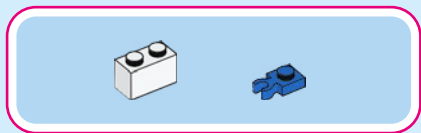 



15

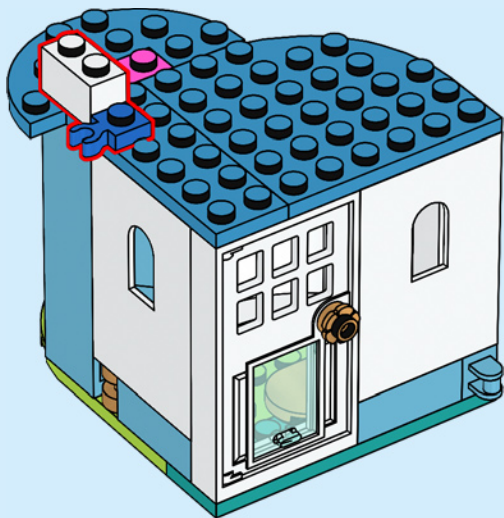 

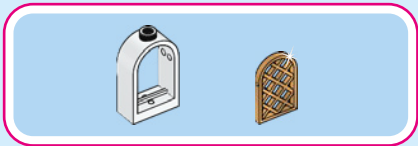 


16

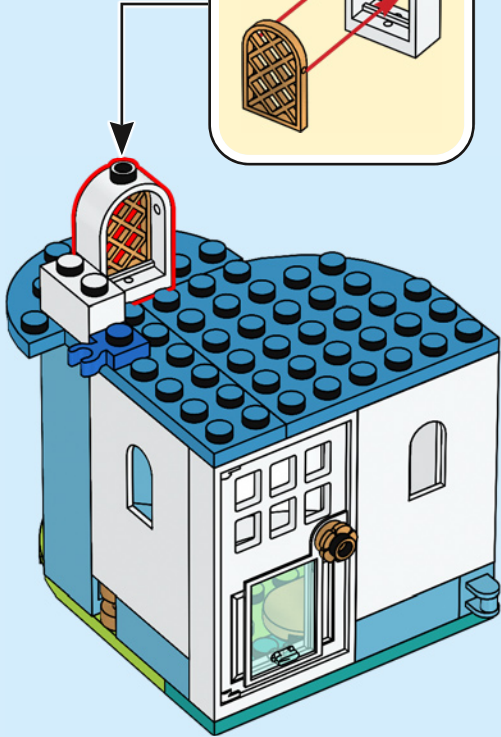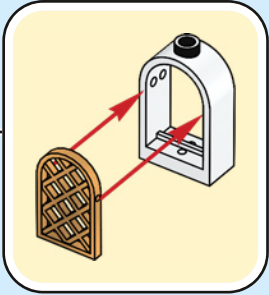  

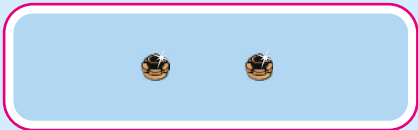 



17

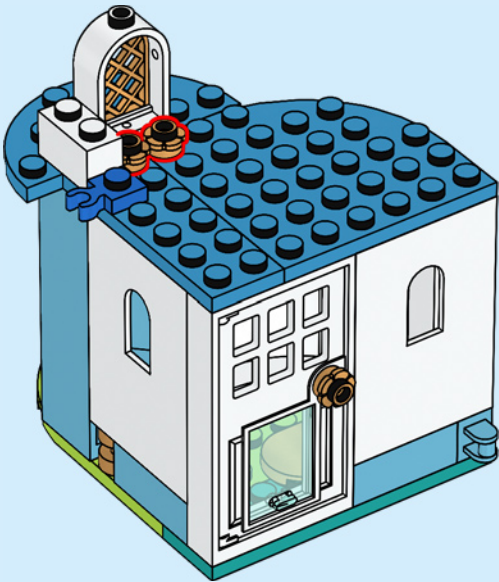 





18

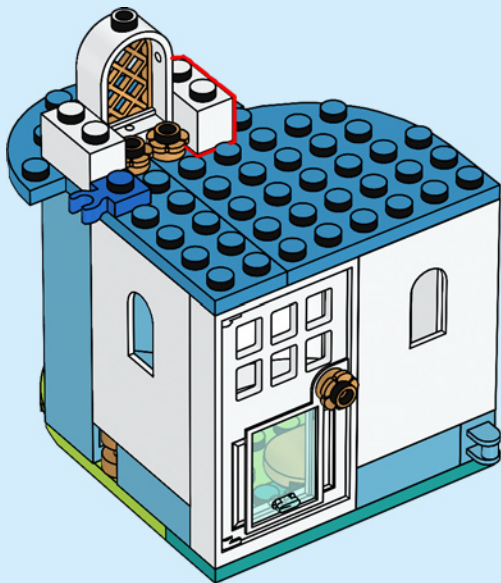 

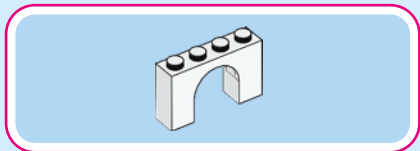 



19

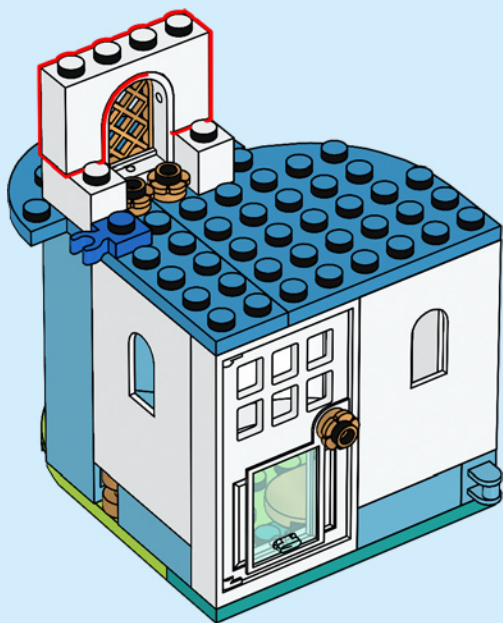 

 


20

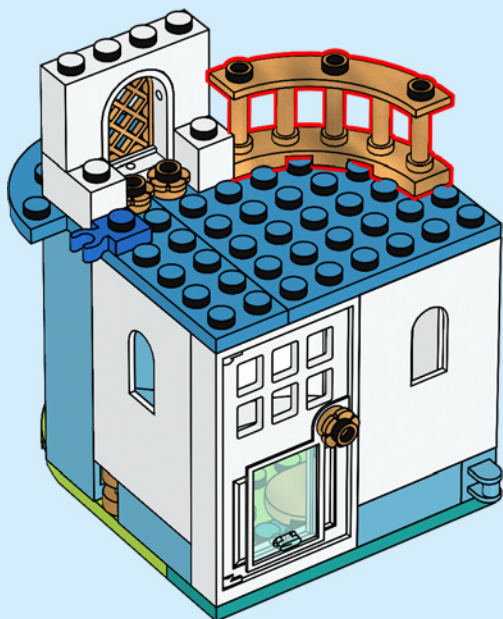 

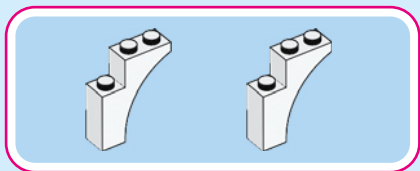 


21

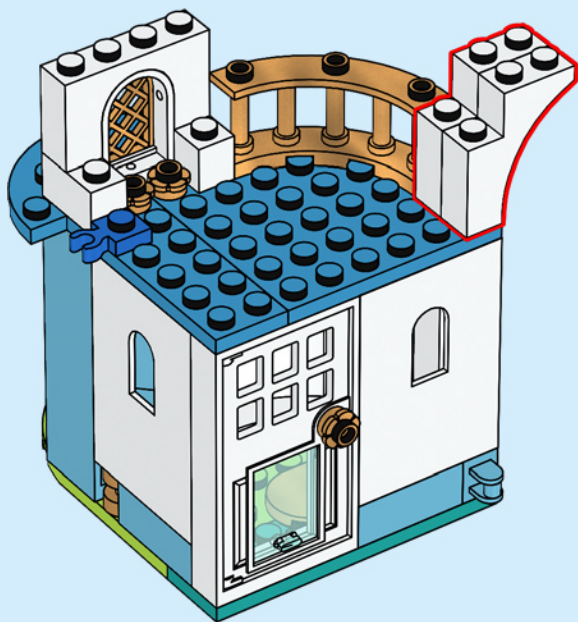 



22

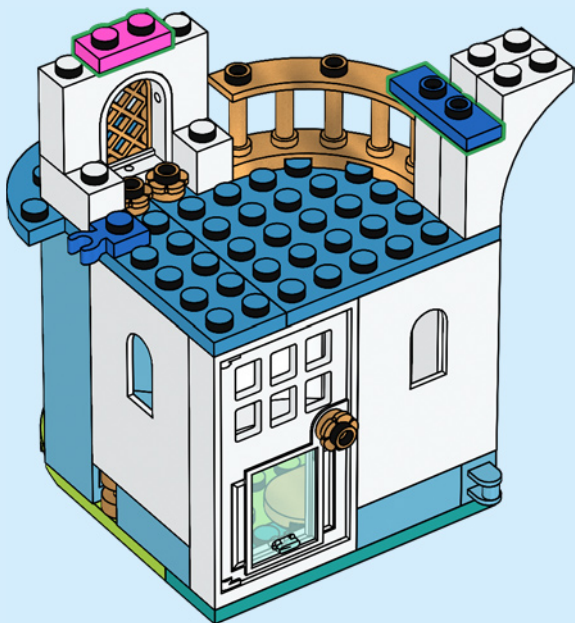 



23



24



 


25





26

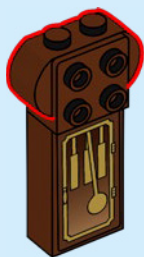



27

 




28




29

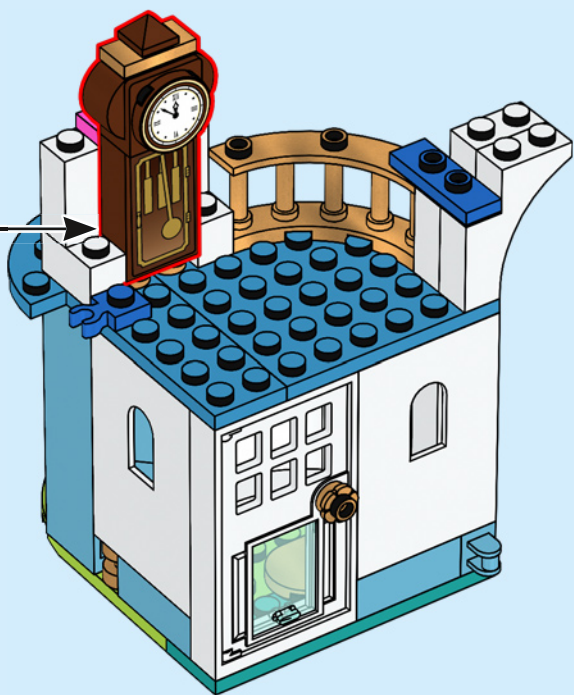




30

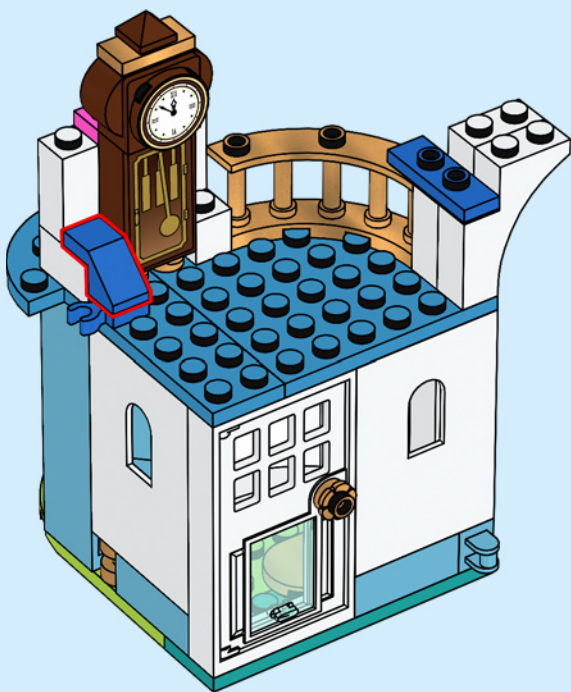 




31

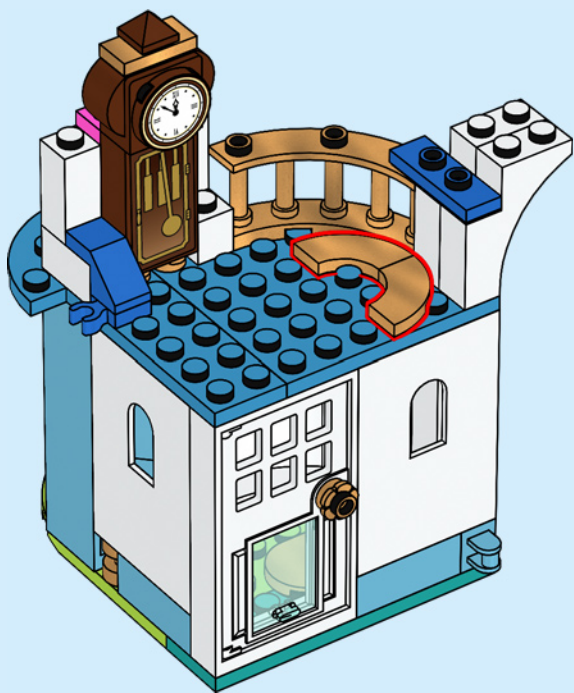 



32

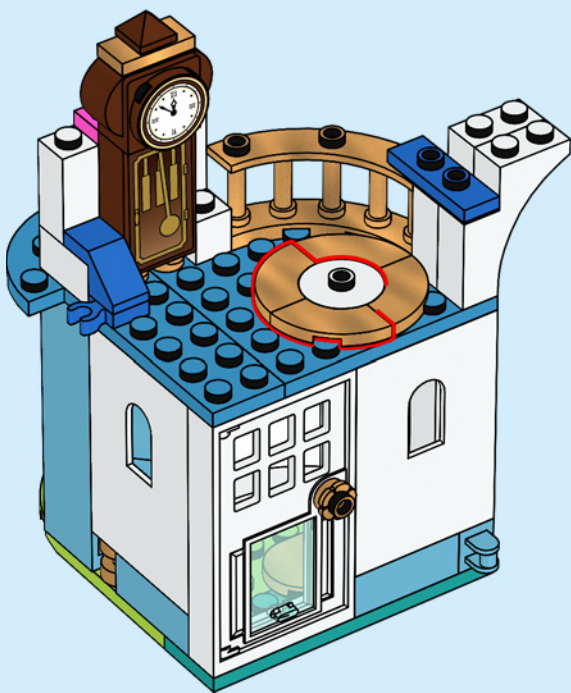 




33


1



 
2





3

 




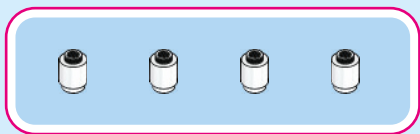 



34

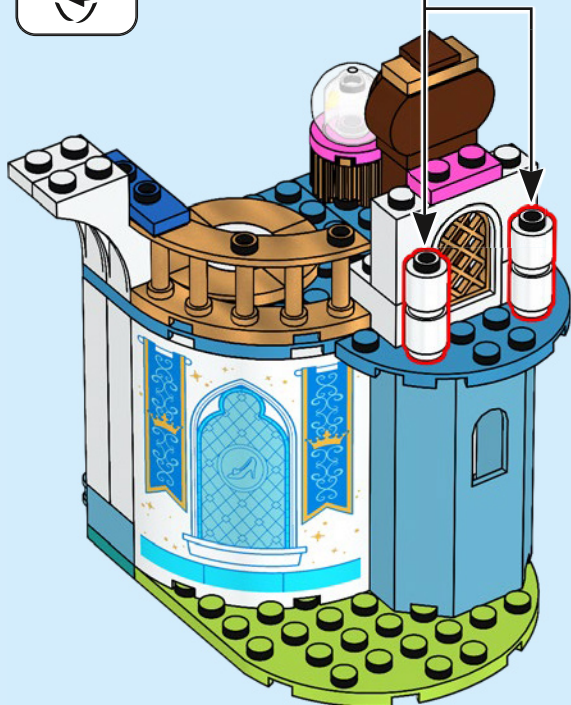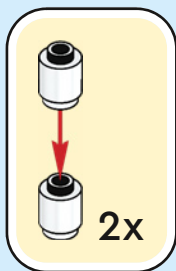  

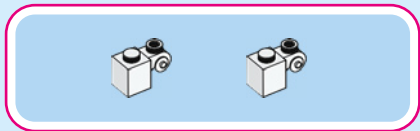 


35

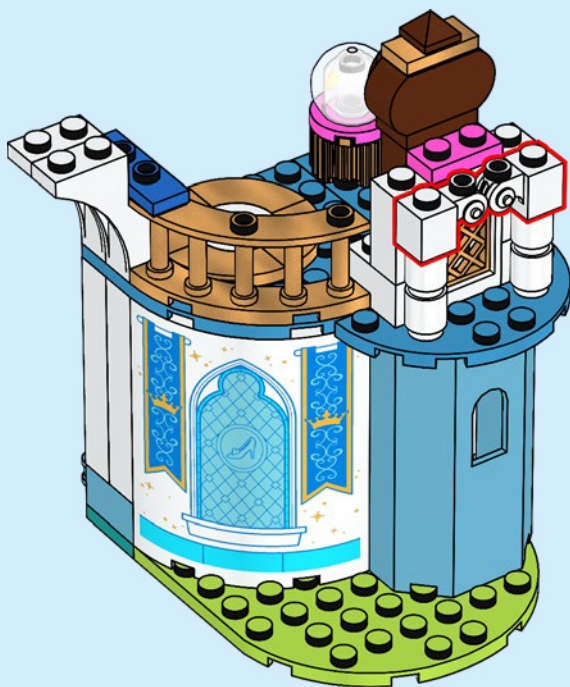 

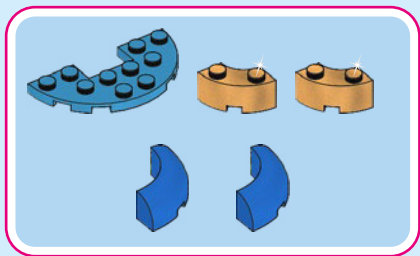 


36

 
1

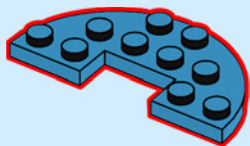


2

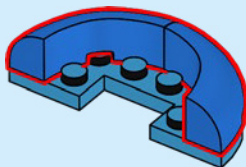 


3

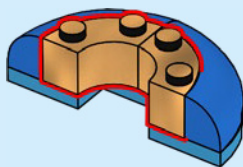 


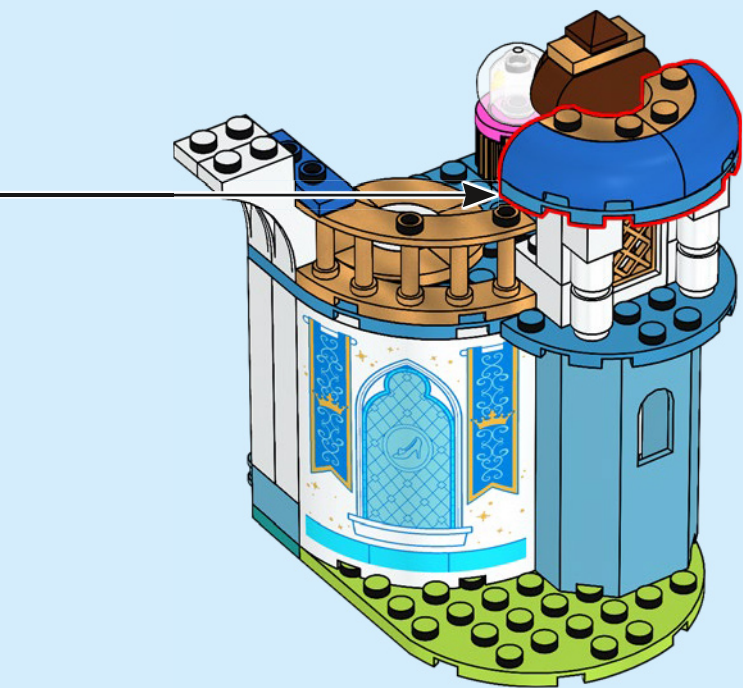 




37

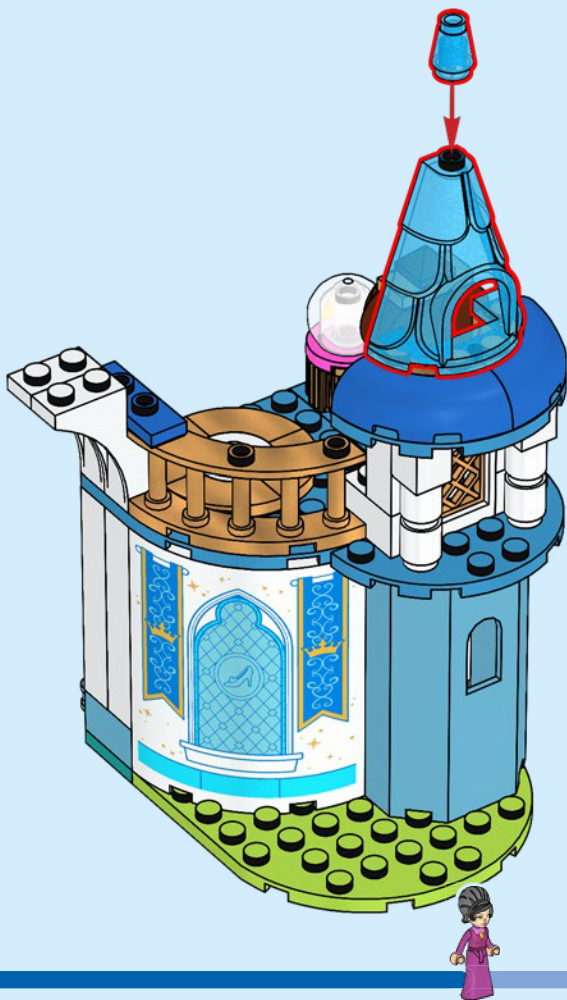 

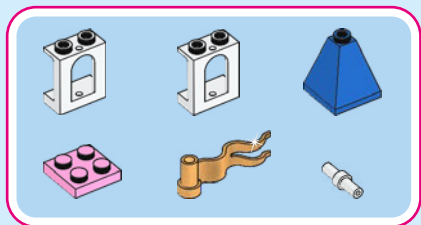 


38

 
1

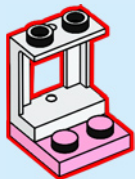



2

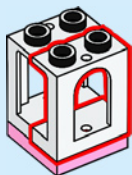 

3

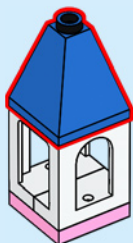 

4

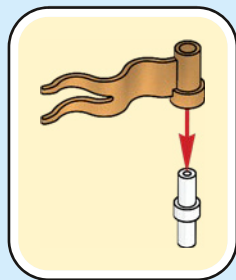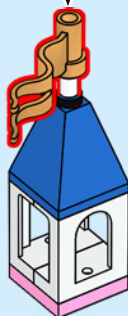  







39



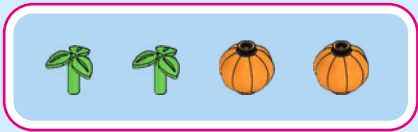 

40

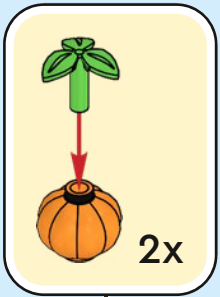 

41









Rebuild
the
world™



Disney
FROZEN

43197



 [LEGO.com/disney](https://www.lego.com/disney)

Disney
PRINCESS



43207

Disney
FROZEN

43204

4+



Disney
PRINCESS

43208



Disney
PRINCESS

43206



©Disney

